

4096-476

November 21, 1997 Revision B

**Assembly Manual** 

## 2.4 METER SERIES 1251 ANTENNA SYSTEM

PRODELIN CORPORATION 1700 NE CABLE DRIVE CONOVER, NC 28613-0368


# 2.4 Meter 2 Piece Az/El Installation Instructions

		T	Т
В	Overall Update	11/21/97	PGW
Α	Revised Hdw tables to reflect B.O.M	2/11/97	PGW
-	ORIGINAL RELEASE	4/10/96	RF
REV.	DESCRIPTION	DATE	APPROVED

#### 2.4M SERIES 1251 ANTENNA SYSTEM

#### **TABLE OF CONTENTS**

SECTION	<u>ON</u>	<u>TITLE</u>
I		GENERAL INFORMATION
	1.0	INTRODUCTION
	1.1	UNPACKING AND INSPECTION
	1.2	MECHANICAL INSTALLATION TOOLS
	1.3	SITE SELECTION
	1.4	SUGGESTED MAST & FOUNDATION
п		REFLECTOR AND SUPPORT ASSEMBLY
	2.0	PART LIST
	2.1	AZ/EL POSITIONER INSTALLATION
	2.2	REFLECTOR PETAL ORIENTATION
	2.3	REFLECTOR SUPPORT ASSEMBLY
Ш		FEED SUPPORT
	3.0	PART LIST
	3.1	FEED SUPPORT INSTALLATION
IV		ANTENNA POINTING
	4.0	ALIGNMENT TO SATELLITE
	4.1	INITIAL ALIGNMENT
٧		MAINTENANCE
	5.0	MAINTENANCE OVERVIEW
	5.1	PERIODIC INSPECTION
	5.2	REFLECTOR
	5.3	MOUNT AND REFLECTOR SUPPORT
	5.4	FEED AND FEED SUPPORT

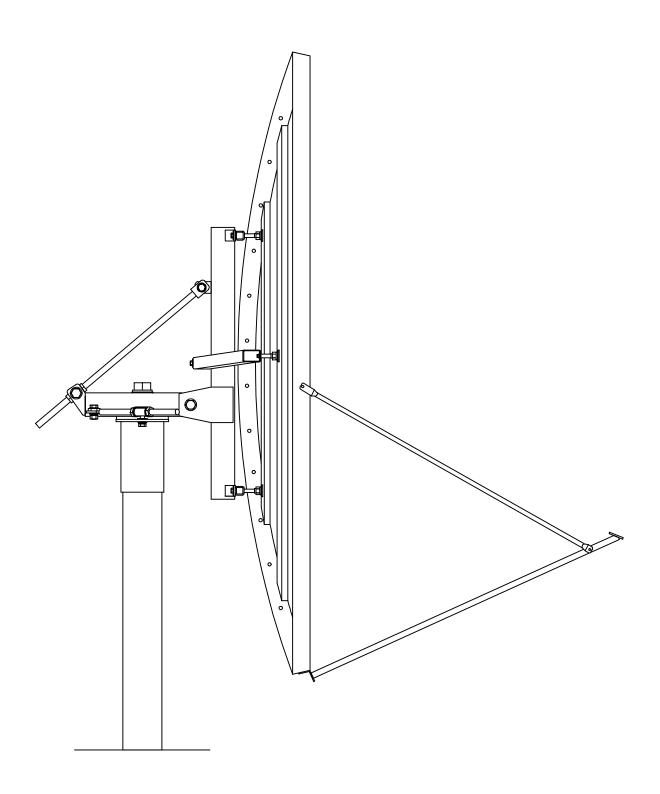

#### SECTION I GENERAL INFORMATION

#### 1.0 INTRODUCTION

This manual describes the assembly and installation of Prodelin's 2.4M 2-Piece Rx/Tx offset antenna system with an Az/El mount (series number1251). The Prodelin 2.4M is a rugged, reliable antenna system that will operate at C-band and Ku-band frequencies with high efficiency and at the same time successfully withstand the effects of the environment.

These instructions are listed by sections that cover all areas of assembly and installation. Additional sections are included in the manual to provide information on antenna alignment to the satellite and maintenance.

#### 1.1 UNPACKING AND INSPECTION

- 1. UNPACKING & INSPECTION The antenna containers should be unpacked and inspected at the earliest date to ensure that all material has been received and is in good condition. A complete packing list for each major component is supplied.
- 2. FREIGHT DAMAGE Any damage to materials while in transit should be immediately directed to the freight carrier. He will instruct you on the matters regarding any freight damage claims.
- 3. MATERIAL MISSING OR DAMAGED Any questions regarding missing or damaged materials that is not due to freight carrier should be directed to Prodelin's Customer Service Department at:

PRODELIN CORPORATION
1700 NE CABLE DRIVE
P.O. BOX 368
CONOVER, NORTH CAROLINA 28613
USA
(828) 464-4141

#### 1.2 MECHANICAL INSTALLATION TOOLS

HARDWARE SIZE	SAE WRENCH SIZE	METRIC WRENCH SIZE	MAXIMUM REC. TORQUE
3 / 8"	9/16"	14 mm	15 ft-lbs
1 / 2"	3 / 4"	20 mm	35 ft-lbs
5 / 8"	15 / 16"	24 mm	70 ft-lbs
3 / 4"	1 – 1 / 8"	28 mm	160 ft-lbs
1"	1 – 1 / 2"	38 mm	220 ft-lbs

#### Also recommended for installation:


Adjustable Wrench 10"
Ratchet (3 / 8" & 1 / 2" Drive)
3"Wrench ( socket, crescent or pipe) for 2" bolt
Inclinometer
Compass

#### 1.3 SITE SELECTION

In order to achieve maximum performance of your antenna system, it is important to select the correct location for the antenna. The following guidelines should be observed when selecting a site for the installation.

- 1. The line of site to the satellite should be clear of any obstructions, such as trees or buildings.
- 2. The site should be relatively flat and level for ease of installation and access to the antenna.
- 3. The site should be checked for underground obstruction, such as buried cables or pipes.
- 4. All local building codes should be adhered to (i.e. grounding, foundation requirements, zoning rules, setbacks, etc.).

#### 1.4 SUGGESTED MAST & FOUNDATION

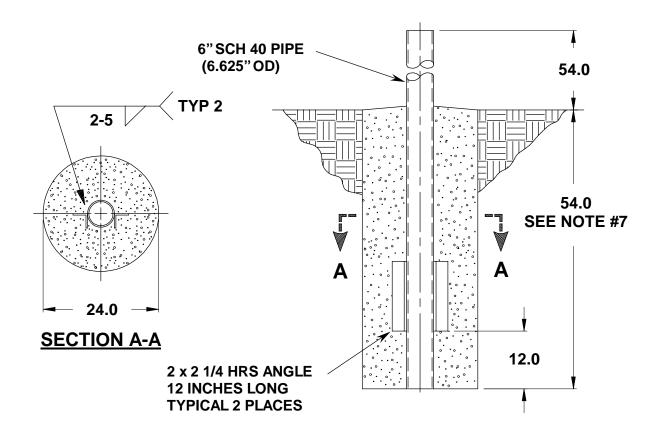

#### NOTES:

- 1. 2 x 2 x 1/4 HRS Angle and schedule 40 pipe should conform with ASTM A36 and ASTM A53 Type E and S Grade B.
- 2. All concrete should conform to building code standards and have a minimum compressive strength of 3000 PSI at 28 days. (Per ACI-318-77)
- 3. Soil bearing capacity should be no less than 2000 PSF.
- 4. Concrete should be poured against undisturbed soil.
- 5. Allow concrete 24 hours set time before installation of antenna.
- 6. The antenna should be properly grounded to meet applicable local codes.
- 7. Minimum depth as shown or extend to local frost line.
- 8. Foundation meets the design requirements as set forth by the uniform building code. (1982 edition)

(PRODELIN CORPORATION DOES NOT REPRESENT OR WARRANT THAT ANY PARTICULAR DESIGN OR SIZE OF FOUNDATION IS APPROPRIATE FOR ANY LOCALITY OR EARTH STATION INSTALLATION.)

#### SECTION II REFLECTOR AND SUPPORT ASSEMBLY


REFLECTOR AND SUPPORT ASSEMBLY PART LIST- TABLE 2.0			
ITEM	PART NO.	DESCRIPTION	QTY
1	0179-381 0179-383	REFLECTOR "A" SIDE REFLECTOR "A" SIDE – WITH SHC	1
2	0179-382 0179-384	REFLECTOR 'B" SIDE REFLECTOR 'B" SIDE – WITH SHC	1
3	0181-691	Az / EI POSITIONER ASSEMBLY	1
4	0159-283	THREADED INSERT	6
5	0490-601	SUPPORT TUBE	1
6	0250-657	TOP / BOTTOM CROSSARM	2
7	0181-249	ELEVATION ADJUSTMENT ASSEMBLY	1
8	0490-602	CROSSARM WELDMENT	1
9	8201-045	3/4 "FLATWASHER	6
10	8200-007	3/4" LOCK WASHER	6


PARTS LIST - CONTINUED				
ITEM	PART NO.	DESCRIPTION		
11	8106-007	3/4"HEX NUT	6	
12	8201-043	1/2"FLATWASHER	12	
13	8201-030	1/2"FLATWASHER - NARROW	28	
14	8202-043	1/2"LOCK WASHER	20	
15	8104-007	1/2"HEX NUT	20	
16	8033-010	1/2"-13 x 1.25 BOLT	14	


PARTS LIST - CONTINUED			
ITEM	PART NO.	DESCRIPTION	QTY
17	8033-021	1/2"-13 x 2.50 BOLT	4
18	8033-032	1/2"-13 x 4.00 BOLT	2
19	8201-042	3/8"FLATWASHER	6
20	8202-042	3/8" LOCK WASHER	6
21	8032-010	3/8"-16 x 1.25 HEX	6

CAUTION: During the assembly procedure, the sequence of instructions must be followed. *Do Not Tighten Any Hardware Until Instructed.* Refer to the antenna assembly parts list and the following steps.

#### 2.1 Az / EI POSITIONER INSTALLATION

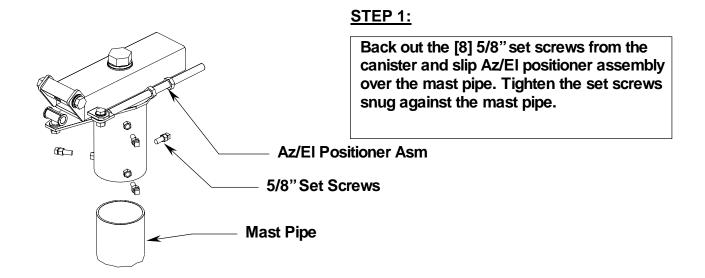

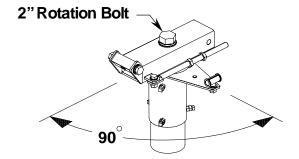

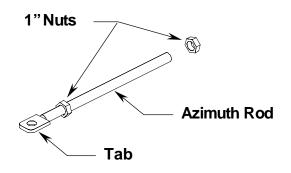


#### **STEP 2:**

- A) Loosen the 2" rotation bolt on top of the positioner.
- A) Rotate the positioner so that the canister plate is oriented as shown.
- C) Lightly tighten the 2" bolt.


#### STEP 3:

- A) Remove the azimuth rod from the positioner.
- A) Run one of the 1" nuts up towards the tab end of the rod and remove the other 1" nut.

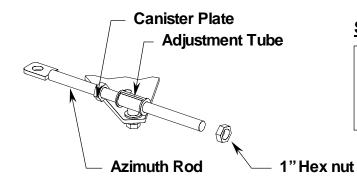

#### STEP 4:

Place the end of the azimuth rod thru the adjustment tube attached to the top of the canister plate and replace the 1" hex nut.

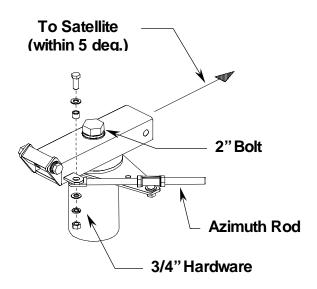

#### STEP 5:

- A) Re-attach the azimuth rod to the positioner with the 3/4"x 2.00 bolt flatwashers, lockwasher, sleeve and nut. Tighten securely.
   Snug the 2"rotation bolt at this time.
- A) The positioner must be oriented correctly to the center of the satellite orbital arc. Loosen the set screws and rotate the canister on the mast pipe to the required position. Tighten the set screws then tighten the 5/8" lock nuts against the canister.

#### 2.2 REFLECTOR PETAL ORIENTATION

The series 1251 reflector petals are labeled "A" and "B". In the standard upright position, the antenna elevation angle range is between 5 and 90 degrees. When viewed from behind in the standard position (feed support at the bottom), the "A" petal (item 1) is on the left side and the "B" petal (item 2) is on the right side – See Fig. 1.

However, to achieve a lower profile installation or in areas of high snow accumulation, the reflector can be assembled inverted (feed support on top) with the "B" petal on the left side and the "A" petal on the right side – See Fig. 2. Please note that in either situation, the angled cross arm (item 8) must be oriented for the correct position – See Fig. 3.

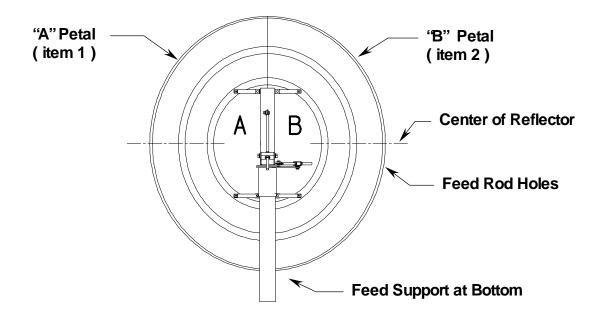


Figure 1



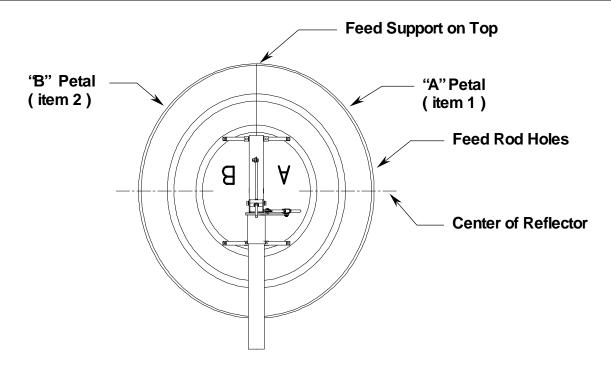


Figure 2

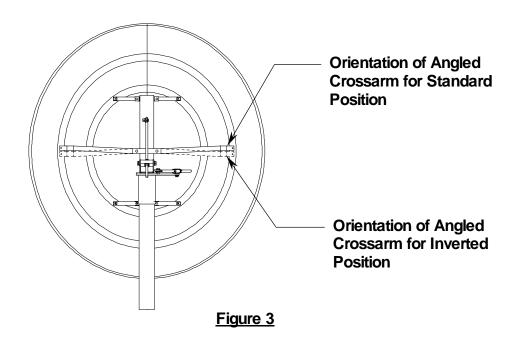


#### 2.3 REFLECTOR SUPPORT ASSEMBLY

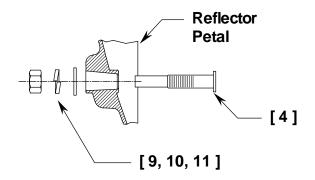


#### **STEP 1:**

Place three of the threaded inserts (item 4) thru the face of each reflector petal (items 1& 2) and secure with 3/4" hardware (items 9, 10 & 11). Snug only, Do not completely tighten at this time.

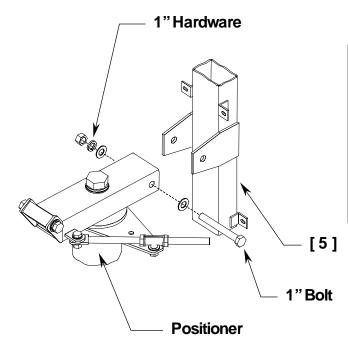


#### STEP 2:

- A) Remove the 1"bolt and hardware from the Az/El positioner.
- B) Straddle the tabs of the reflector tube (item 5)over the holes in the positioner and replace 1" bolt and hardware. Tighten snug only and let the tube fall back upon the positioner.




#### **STEP 3:**

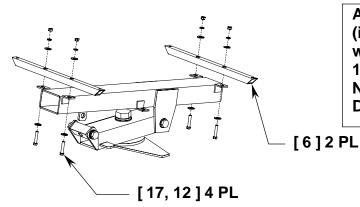


Attach the top and bottom crossarms (item 6) to the reflector support tube with 1/2" hardware (items 12,14,15,17).

Note orientation of crossarms. Do not tighten.

#### STEP 4:

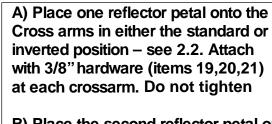

B) Place the second reflector petal on the cross arms and repeat above procedure.

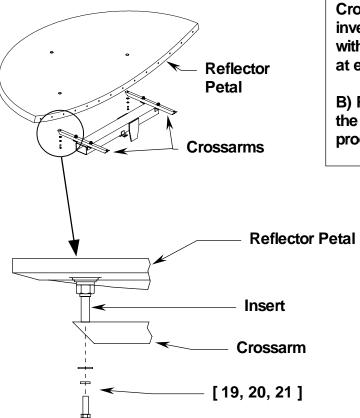





#### STEP 5:

16

Attach the two petals together with 1/2" hardware (items 13, 14, 15, 16) at the fourteen holes on the inner seams of the reflector petals.

Tighten these bolts securely at this time while aligning the petals at the face of the reflector.

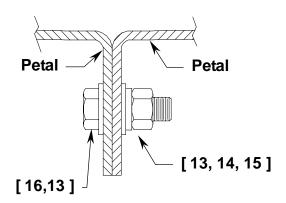


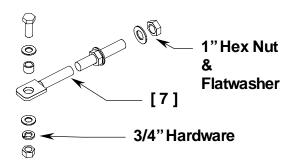

#### STEP 6:

Locate the elevation assembly (item 7) and remove the 3/4" hardware as well as one 1" hex nut and washer.


Carefully swing the reflector up into a vertical position. Insert the elevation assembly (item 7) thru the elevation adjustment tube at the back of the positioner. Replace the 1" hex nut and

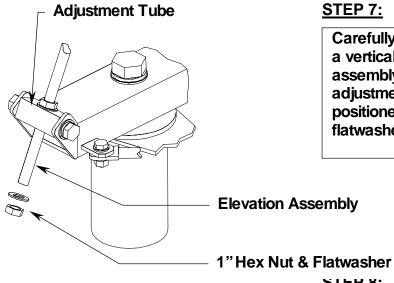


#### SIEP 8:

flatwasher.

Attach tabbed end of the elevation assembly to the tab on the back of the reflector support tube with the 3/4" hardware removed in step 6. Tighten securely.

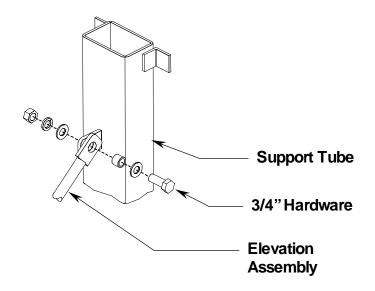

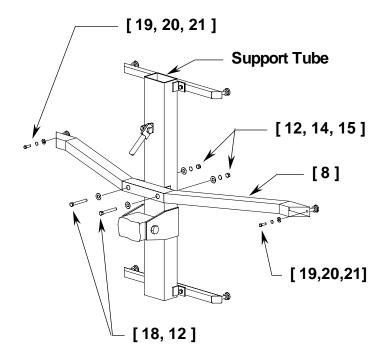

### SECTION III FEED SUPPORT ASSEMBLY

#### STEP 9:


- A) Attach the angled crossarm (item 8) to the reflector support tube in either the standard or inverted position depending on the reflector orientation with 1/2" hardware (items 12, 14, 15, 18).
- A) Attach the ends of the crossarm to the reflector petals at the threaded inserts with 3/8" hardware (items 19, 20, 21).
- A) Tighten the reflector support hardware by first tightening the 3/4" hardware at the six reflector inserts followed by the 3/8" bolts holding the reflector to the three crossarms. Next tighten six 1/2" bolts holding the crossarms to the reflector support tube. Do not tighten the elevation hardware until after satellite alignment.

The following instructions are for installing a typical C-band or Ku-band feed support to Prodelin's 2.4 meter antenna system.


FEED SUPPORT PART LIST- TABLE 3.0			
ITEM	PART NO.	DESCRIPTION	QTY
1	VARIES	FEED SUPPORT	1
2	VARIES	FEED ROD – Ku BAND	2
3	VARIES	FEED ROD – C BAND	2
4	8032-014	3/8" x 1.75 BOLT	4
5	8032-028	3/8" x 4.00 BOLT	1
6	8201-042	3/8" FLATWASHER	10
7	8202-042	3/8"LOCKWASHER	5
8	8102-007	3/8" HEX NUT	5

#### 3.1 <u>Feed Support Installation</u>


**STEP 1:** 

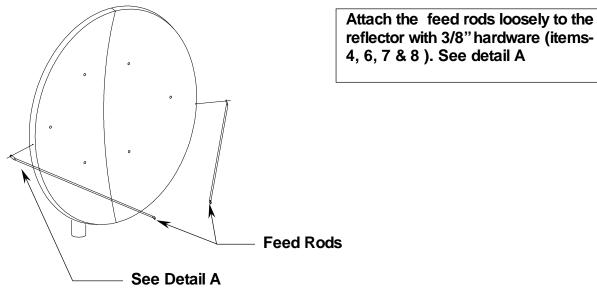


**STEP 2:** 

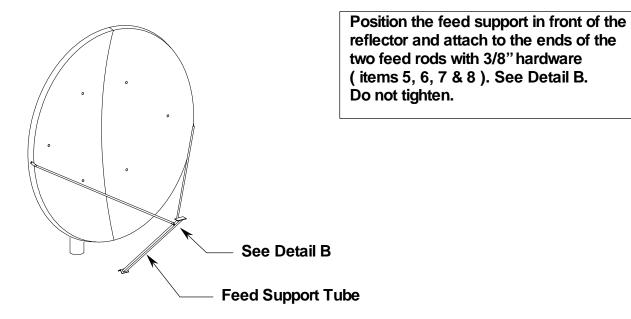


#### **STEP 3:**

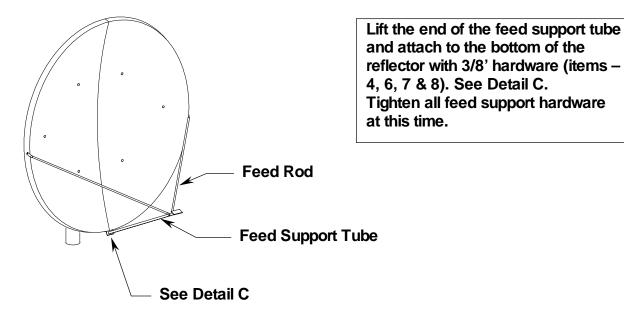


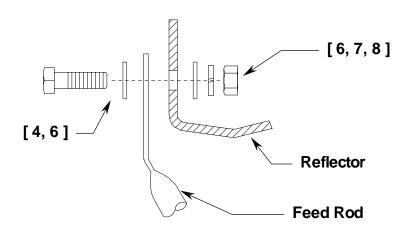

**DETAIL A** 

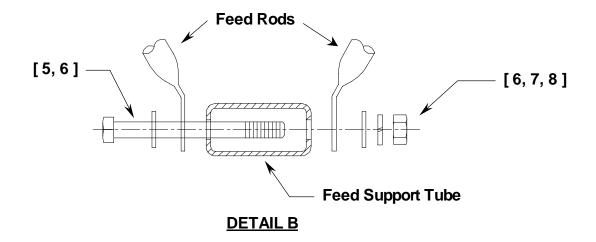



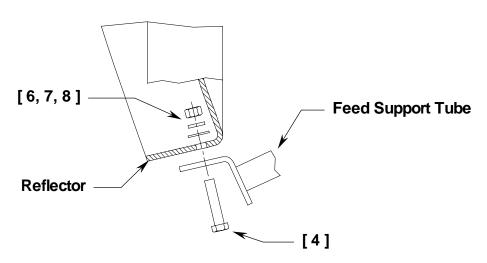

NOTE: At this time you are ready to install your C-band or Ku-band feed system. For feed installation, reference any instructions that are enclosed with your specific feed support.

#### SECTION IV ANTENNA POINTING

#### 4.0 Alignment To Satellite

The 2.4M offset reflector contains a 22.3° elevation offset angle. Therefore, when the reflector aperture is perpendicular to the ground, the antenna is actually looking 22.3° in elevation. The following alignment procedure is intended only as a general reference guide for this antenna. For proper antenna performance, accurate alignment is critical. Therefore, it is recommended that your own detailed procedure be used or contact Prodelin's Technical Support Department for additional recommendations.

#### 4.1 <u>Initial Alignment</u>

- Place an inclinometer on the reflector support as shown in Figure 4.
   Remember to add 22.3 degrees to the reading to allow for the reflector's offset angle ( or subtract 22.3 degrees if inverted)
- 2) Raise or lower the antenna to find the desired elevation by turning the 1" nuts located at the elevation block. Position the top nut so that it will not interfere with adjustment. Turn the bottom nut clockwise to increase elevation and counterclockwise to decrease elevation.
- 3) After the correct elevation angle is set, rotate the antenna in azimuth by loosening the 1" nuts on the azimuth adjustment rod. Rotate azimuth until a signal is reached.
- 4) Peak the antenna signal by fine adjustments made in both azimuth and elevation.
- 5) Tighten all of the hardware used for adjustments.
- 6) Tighten 2" bolt.

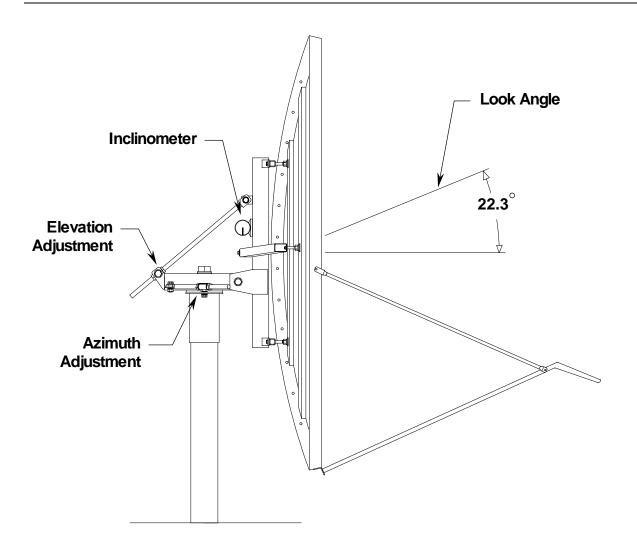


Figure 4

#### SECTION V MAINTENANCE

#### **5.0** Maintenance Overview

After installation, the antenna requires only periodic inspection. It is anticipated that maintenance, if required, will be minimal and easily handled by a local or inhouse maintenance staff. The materials used in the construction of this Earth Station Antenna virtually eliminate any maintenance repairs.

#### 5.1 Periodic Inspection

It is suggested that a periodic inspection be performed at least every six months.

NOTE: After any very severe weather conditions, inspection of the antenna should be performed to determine if foreign objects have caused damage or if survival specifications have been exceeded.

This inspection should include the following:

- 1) Check all bolting locations all bolts should be tight.
- 2) Check all structural members repair or replace if damaged.
- 3) <u>Check the foundation anchor bolts</u> they must be secure and with no failure signs in foundation.
- 4) Check for corrosion on the reflector structure and mount.

#### 5.2 Reflector

Prodelin's reflector does not require any maintenance. The composite construction of the reflector is virtually impervious to any damages that could be caused by weather or other atmospheric conditions.

It is only necessary to inspect for any physical damage done by vandalism or very severe weather conditions.

Should any damage be detected to a portion of the reflector, contact the Customer Service Department at Prodelin for recommendations involving reflector repair.

#### 5.3 <u>Mount And Reflector Support Structure</u>

The mount and reflector support structure supplied with this antenna is of steel construction and has a hot-dipped galvanized finish.

If inspection shows any signs of structural failure, the mount members that are damaged should be repaired or replaced.

<u>Corrosion:</u> Any corrosion on steel members may be repaired with a cold, zincrich galvanizing paint.

#### 5.4 <u>Feed And Feed Support</u>

The feed support system should be inspected to insure that all hardware is secure. The feed/radio mounting bolts should be tight.

The feed horn window should be inspected to insure that it is intact so that no moisture can collect inside the feed horn. Replace if damaged.