


# RCS11

# 1:1 Redundancy Switch



#### **HIGHLIGHTS**

- ► 1:1 Redundancy Protection for DMD15, DMD20, DMD50, DMD2401, DM240 and DD240
- Automatic or Manual Modes of Operation
- Self-Contained Dual Redundant Power Supplies
- Manual Operation from Front Panel or Remote Control
- Independent (Mod/Demod) or Coupled (Modem) Backup Capability
- ► IF Options 70/140 MHz or L-Band

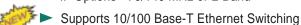

## OVERVIEW

The Radyne RCS11 1:1 Redundancy Switch provides simple backup redundancy protection for all configurations of DMD15, DMD20, DMD50 and DMD2401 satellite modems as well as the DVB series of Digital Video Modulators and Demodulators. The backup functions of the RCS11 may be performed automatically, manually or from Terminal Mode.

Operating In the automatic mode, the RCS11 immediately places a non-faulted backup modem online in the event of a primary online modem failure. In the Manual Mode, the user may designate the selected online primary modem either from the interactive front panel or a remote terminal interface.

# REDUNDANT POWER SUPPLIES

For highest reliability, the RCS11 is equipped with two fully-redundant internal power supplies that provide +5 Volts to the system. Each power supply is fully independent of the other, including their source of AC power and fusing. The RCS11 remains fully-operational as long as either power supply is providing a source of power. The power supplies are located one on either side of the front of the RCS11 chassis.

# FRONT PANEL CONTROLS

The front panel of the RCS11 provides all of the necessary controls and LED indicators to provide the operator with online status and backup status of the online and backup modulators and demodulators.

### POWER-UP DEFAULTS

During power-up, the RCS11 initializes itself to the last mode set by the front panel pushbuttons. For example, if the operator desires the RCS11 to operate in the Auto Mode, with both Mod and Demod set to Modem B, the operator places the RCS11 into this condition using the front panel pushbuttons and the RCS11 stores this configuration into nonvolatile memory. If the power source was then to fail and be restored, the RCS11 would again power-up in the Auto Mode with both Mod and Demod set to Modem B.



# **RCS11 1:1 Redundancy Switch**

# SPECIFICATIONS

#### **GENERAL**

Modes of Operation: Auto, Manual, Remote

Modem, Mod Only, Demod Only Configurations:

Modulator Switch Time: 50 msec Maximum

**Demodulator Switch** 

Time: 50 msec Maximum + Demod Lock Time

Modulator Switch Delay Time:

40 msec **Demodulator Switch** 

Delay Time: 1 Second

IF Switching: 70/140 MHz: BNC (F) 75 Ohm Standard

(50 Ohm Optional)

L-Band: SMA (F) All L-Band Products

Type-F (F) DD240

#### **MONITOR AND CONTROL**

All operating parameters can be monitored and controlled via the front panel display/keypad or the RS-485 or RS-232 serial control channel in either terminal or command modes. The following modem parameters may be controlled and/or monitored:

Parameters Monitored: Mode, Mod/Demod/Modem, Power

Supply Status, Internal Switch Settings, Software Revision, Auto/Manual, Select

Parameters Controlled: Mode, Mod/Demod/Modem,

Auto/Manual, Select A, Select B

#### TERRESTRIAL INTERFACES

Synch: RS-449, V.35, RS-232 DMD2401:

Universal: RS-449, V.35, RS-232, G.703, IDR and IBS Alarms,

Drop & Insert

Universal: RS-449, V.35, RS-232, DMD15:

G.703, IDR and IBS Alarms,

Drop & Insert

DM240: ASI

M2P, DVB (RS-422 or LVDS)

G.703, HSSI

RS-422 Serial

DD240: ASI

M2P, DVB (RS-422 or LVDS)

G.703, HSSI

DMD20/DMD50/ Synch: RS-530, V.35, RS-232 DMD2050

Universal: RS-530, V.35, RS-232, G.703, IDR and IBS Alarms,

Drop & Insert, Synch

ASI **HSSI** 

Ethernet1 Synch

### FRONT PANEL LED INDICATORS

Unit: Power Supply 1

Power Supply 2 Switch Fault

Auto

Manual Demodulator: Online A/B Fault A/B

Online A/B Modulator: Fault A/B

#### **FRONT PANEL CONTROLS**

Enable

Select Auto Mod Select A Mod Select B Demod Select A Demod Select B

**OPTIONS** 

Cable Sets: DMD2401

DMD15 DMD20 DMD50 DMD2050 DD240 DM240 ES/ES

#### POWER AND ENVIRONMENTAL

Prime Power: 100 to 240 VAC, 50 to 60 Hz, 40 Watts Operating Temperature: 0 to 50°C, 95% Humidity, Noncondensing Storage Temperature: -20 to 70°C, 99% Humidity, Noncondensing

#### **PHYSICAL**

Chassis Size: 19" L x 19" W x 1.75" H

(48.26 cm x 48.26 cm x 4.45 cm)

Weight: 12 Pounds (5.4 Kg)

**U.S.A./Canada**: 3138 East Elwood Street, Phoenix, Arizona 85034 USA Tel: +(1) 602.437.9620 Fax: +(1) 602.437.4811 7330 Trade Street, San Diego, California 92121 USA Tel: +(1) 858.458.1800 Fax: +(1) 858.657.5400 7330 Trade Street, San Diego, California 92121 USA 161: +(1) 858.498.1800 Fax: +(1) 858.697.5400 Fax: +(1) 420.540.233 Fax: +(44) 1420.540.232 Europe/Middle East/Africa: Charwell House, Wilsom Road, Alton, Gul34 2PP, United Kingdom Tel: +(44) 1420.540.233 Fax: +(44) 1420.540.232 Latin America: 3138 East Elwood Street, Phoenix, Arizona 85034 USA Tel: +(1) 602.437.9620 Fax: +(1) 602.437.4811 China: Room 405, Building B, Heqiao Mansion, No. 8 Guanghua Road, Chaoyang District, Beijing 100026 China Tel: +(86) 10.658.31975 Fax: +(86) 10.658.31974 Asia-Pacific: 15 McCallum Street, #12-04, NatWest Centre, Singapore 069045 Tel: +(65) 6225.4016 Fax: +(65) 6325.1950 Jl M.T. Haryono Kav 25, Jakarta, Indonesia 12820 Tel: +(62) 21.521.3733 Fax: +(62) 21.252.0142





Œ